

ELAC

NAVA

MODEL : NAVA100-BK



OWNER'S MANUAL

Congratulations on your new ELAC NAVA100 Bluetooth Speaker.

 
MUSIC IN MOTION

Inspired by ELAC's maritime heritage in Kiel, Germany, NAVA™ carries forward the spirit of movement, exploration, and freedom. Just as a vessel carries you across waters, the NAVA100 carries your music wherever life takes you.


With effortless Bluetooth connectivity and ELAC's signature sound, the NAVA100 delivers detailed powerful audio wherever life takes you. Clean design and the freedom to go anywhere make it more than just a speaker - it's Music in Motion.

JOURNEY TOGETHER THROUGH - THE LIFE OF SOUND

Contents

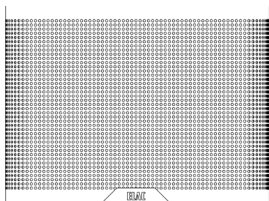

ELAC NAVA™ 100

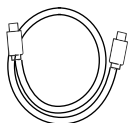 


USB-C CHARGING CABLE




QUICK INSTALL GUIDE

 Buttons

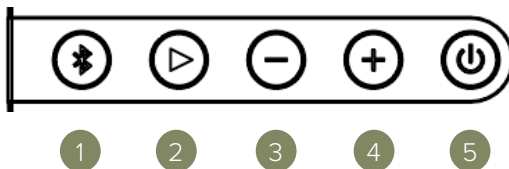


1. BLUETOOTH PAIRING - DUAL PLAY
2. PLAY/PAUSE
3. VOLUME DOWN
4. VOLUME UP
5. LED/POWER (HOLD)

 Battery Charge

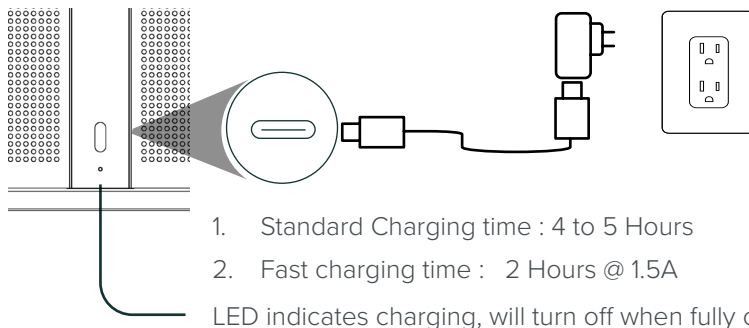


1. Standard Charging time : 4 to 5 Hours
 2. Fast charging time : 2 Hours @ 1.5A
- LED indicates charging, will turn off when fully charged.

 Bluetooth Wireless Technology

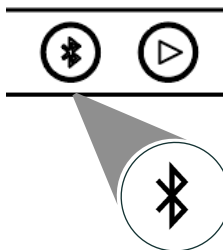

1. On power up, blue LED flashes, if it was previously paired, unit connects and LED stops flashing.
2. If not previously paired, unit remains in pairing mode and LED continues to flash.
3. If paired, pressing and holding BT button will disconnect, and initiate BT pairing and LED will flash.

 Dual Play Technology

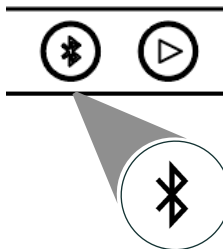

Dual Play - allows a paired NAVA 100 speaker to broadcast to an unpaired NAVA 100 speaker for stereo playback.

To enable:

1. Turn on NAVA100 speaker that you have paired with. If not paired, make sure to pair with it first.
2. Turn on second unit and make sure you are not previously paired with it.
3. Press BT button on paired speaker
4. Press BT button on unpaired speaker.
5. They will auto connect within 1 to 3 seconds.
6. To disconnect Dual Play - press BT button once on either speaker.

Note : Dual Play - Stereo

In Dual Play mode, the LEFT channel is assigned to the paired speaker (master). The right channel is assigned to the unpaired speaker.

Important Safety Instructions

1. IMPORTANT SAFETY INSTRUCTIONS! READ these instructions.
 2. KEEP these instructions.
 3. HEED all warnings.
 4. FOLLOW all instructions.
 5. DO NOT use this apparatus near water.
 6. CLEAN ONLY with dry cloth.
 7. DO NOT block any ventilation openings. Install in accordance with the manufacturer's instructions.
 8. DO NOT install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
 9. DO NOT defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wider blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
 10. PROTECT the powercord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
 11. ONLY USE attachments/accessories specified by the manufacturer.
 12. USE ONLY with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
 13. UNPLUG this apparatus during lightning storms or when unused for long periods of time.
 14. REFER all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
 15. DO NOT expose this apparatus to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the apparatus.
 16. To completely disconnect this apparatus from the AC Mains, disconnect the power supply plug from the AC receptacle.
 17. The mains plug of the power supply adapter shall remain readily operable.
 18. DO NOT overload wall outlets or extension cords beyond their rated capacity as this can cause electric shock or fire.
- The exclamation point, within an equilateral triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.
- The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electrical shock to persons.
- WARNING:** To reduce the risk of fire or electrical shock, do not expose this apparatus to rain or moisture.
- WARNING:** No naked flame sources – such as candles – should be placed on the product.
- THIS PRODUCT USES LITHIUM-ION BATTERIES. IF MISUSED OR ABUSED THIS CAN RESULT IN:**
1. Smoke or gas hazard
 2. Heat hazard
 3. Fire hazard
 4. Explosion hazard

Important Safety Instructions

WARNING: Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

WARNING: Risk of leakage. Only use the specified type of batteries. Never mix new and used batteries.

Observe correct polarity. Remove batteries from products that are not in use for extended periods of time. Store batteries in a dry place.

WARNING: Do not handle leaking or damage Lithium batteries.

WARNING: Danger of explosion if battery is incorrectly replaced, or equivalent type. Replace only with the same or equivalent type.

WARNING: Do not place batteries in mouth or ingest. Keep out of reach of children and pets..

WARNING: Do not recharge non-rechargeable batteries.

WARNING: Operating temperature between 32°F/0°C and 95°F/35°C

Please dispose of any used batteries properly, following any local regulations. Do not incinerate.

WARNING: Do Not Open! Risk of Electrical Shock. Voltages in this equipment are hazardous to life. No user-serviceable parts inside. Refer all servicing to qualified service personnel.

Place the equipment near a main power supply outlet and make sure that you can easily access the power breaker switch.

WARNING: This product is intended to be operated ONLY from the AC Voltages listed on the back

panel or included power supply of the product. Operation from other voltages other than those indicated may cause irreversible damage to the product and void the products warranty. The use of AC Plug Adapters is cautioned because it can allow the product to be plugged into voltages in which the product was not designed to operate. If the product is equipped with a detachable power cord, use only the type provided with your product or by your local distributor and/or retailer. If you are unsure of the correct operational voltage, please contact your local distributor and/or retailer.

EU COMPLIANCE INFORMATION

Eligible to bear the CE mark; Conforms to European Union Low Voltage Directive 2006/95/EC; European Union EMC Directive 2004/108/EC; European Union WEEE Directive 2002/96/EC; European Union Eco-Design Directive 2009/125/EC; European Union Radio and Telecommunications Terminal Equipment (R&TTE) Directive 1999/5/EC; European Union Restriction of Hazardous Substances Recast (RoHS2) Directive 2011/65/EC;

This product contains batteries that are covered under the 2006/66/EC European Directive, which cannot be disposed of with normal household waste. Please follow local regulations.

WEEE NOTICE

Note: This mark applies only to countries within the European Union (EU) and Norway. This appliance is labeled in accordance with European Directive 2002/96/EC concerning waste of electrical and electronic equipment (WEEE). This label indicates that this product should not be disposed of with household waste. It should be deposited at an appropriate facility to enable recovery and recycling.