





Note:

RESET erases all data and restores subwoofer firmware and parameters to the original factory settings.

Firmware upgrade may be necessary post RESET.

- 1. Press and hold down RESET button for minimum of 10 seconds
- 2. LED starts to blink (flash). LED blinking parameters: LED is on for 100 ms (milliseconds) then LED is off for 100 ms.
- 3. Release the RESET button before 15 seconds elapses in order to force the sub to perform Factory Reset
- 4. If the RESET button is held down for more than 15 seconds Factory Reset is cancelled.

1 TIME SEQUENCE DIAGRAM

The rear panel LED will blink faster as the "action on release" gets more "dangerous".

- 1. Short press and release is power on
- 2. If it start blinking on release will be pairing
- 3. If hold > 10sec it will blink faster on release it will do factory reset
- 4. If you hold > 15sec it will timeout (LED off)

