ELAC

FIRMWARE UPDATE

CONNEX SERIES

1 **FIRMWARE UPDATE**

ELAC Debut ConneX   Model : DCB41

1938 N. Batavia St.   Fraunhofestrabe 16
Suite K
Orange, CA, 92865 24118 Kiel, Deutchland

HDMI (ARC)

L/R
SPEAKER OUT

UPDATE ONLY

GND

SERIAL NUMBER

PHONO

ON/OFF

USB   OPT   SUB OUT
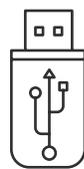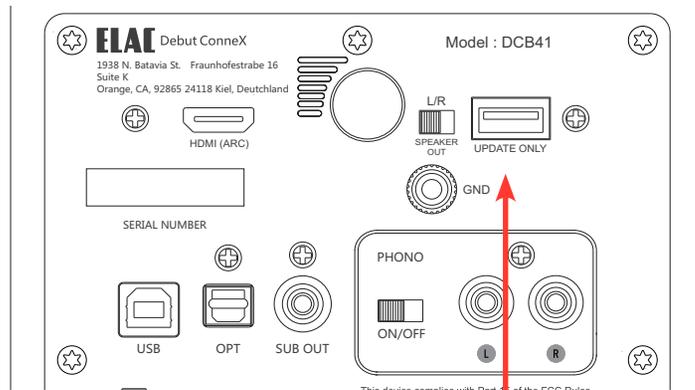
L   R

This device complies with Part 15 of the FCC Rules

USB FLASH DRIVE

1. Turn Unit Off

2. Uncompress the zip files and load onto to **ROOT DIRECTORY** of flash drive. Must be the **ROOT DIRECTORY**

3. Note there are a total of 4 files.

4. Insert the USB drive as indicated by the red arrow and turn on AC power.

5. Programming will start automitclly. LED will flash white, signifying upgrading in progress

6. Special attention!!: During the upgrade, do not remove the USB drive as it is highly likely to become bricked. Please be careful!!

7. Upgrade is successful, the LED will flash white/green.

8. You can now unplug the USB and cycle power off/on.